

IBM i System Support

IBM i Servers	Support Releases	6.1	7.1	7.2	7.3	7.4	7.5
Power10	E1080, S1022 (VIOS only), S1024, S1014				✓	✓	✓
Power9	S914, S922 (VIOS only), H922 (VIOS only), S924, H924, E980 S922 Entry (single native I/O partition only)			✓	✓	✓	✓
Power8	S814, S822 (VIOS only), S824, E870, E870C, E880, E880C S812 (no IBM i 7.1, native I/O only)		✓	✓	✓	✓	
Power7/7+	710, 720, 730, 740, 750 (VIOS only), 760 (VIOS only), 770, 780, 795	✓	✓	✓	✓		
Power7 BladeCenter	700/701/702/703/704 (all VIOS only)	✓	✓	✓			
Power7/7+ Flex	260/270/460 (all VIOS only)	✓	✓	✓			
Power6+	20, 550, 560, 570, JS23/43 (VIOS only)	✓	✓	✓			
Power6	520, 550, 570, 595, JS12/22 (VIOS only)	✓	✓	✓			
Power5/5+	515, 520, 525, 550, 570, 595	✓	✓				
	800, 810, 825, 870, 890	✓					